



FL300

**GAMING HEADSET &
BLUETOOTH® SPEAKERS**

FL300UNI-31-MU, FL300UNI-32-MU,
FL300UNI-33-MU, FL300UNI-34-MU

NEED HELP?:

WWW.GIOTECK.COM/CONTACT-SUPPORT

ACTIVATE YOUR PRODUCT WARRANTY:

GIOTECK.COM/REGISTER

EN

DE

ES

FR

PT

IT

PRECAUTIONS



Before using the headset, turn the volume down to a mid-level or very low, then slowly adjust it to a comfortable level. Exposure to high volume sound levels may cause temporary or permanent damage to your hearing. You should always set your volume to moderate levels and avoid long exposure to high volume levels.

- Contains small parts. Not suitable for children under 7 years of age.
- Store in a dry & dust free area.
- Do not store in areas of extreme low (0°C) or high (40°C) temperatures.
- Avoid direct sunlight and heat sources.
- Do not allow the product to get wet or dirty; doing so may cause damage.
- Do not clean with benzene, paint thinner, acetone, alcohol, or other such solvents.
- Do not take the product apart; doing so will void your warranty and may cause electrical shock or damage to internal components.
- Please help to conserve the environment by recycling the cardboard packaging of this product.
- This product should NOT be disposed of in normal household waste. It should be disposed of separately. Please take it to an electrical waste collection point.

This product is covered by a one [1] year warranty.
For full Terms and Conditions, and for Technical Assistance,
go to : www.gioteck.com/contact-support

Activate your product warranty: www.gioteck.com/register

For help with the set-up or operation of this product please
go to: **GIOTECK.COM/CONTACT-SUPPORT**

Thank you for buying the Gioteck FL300 Gaming Headset & Bluetooth® Speakers. These Headphones are designed to be convenient, stylish and provide high quality audio Playback from any Bluetooth® enabled Audio Device or wired only device.

The FL300 can also be used as portable Bluetooth® stereo speakers for enjoying music with friends or listening to movies together.


The FL300 can also be used to receive telephone calls while in use and will automatically pause the audio playback in order to receive the call and when the call ends audio Playback will resume.

Please read this User Guide thoroughly before use so that you can understand the setup and functions.

CONTENTS


Please check your package contains the following items:

- 01] FL300 Gaming Headset & Bluetooth® Speakers
- 02] 3.5MM Audio Cable
- 03] USB Charging Cable
- 04] User Guide

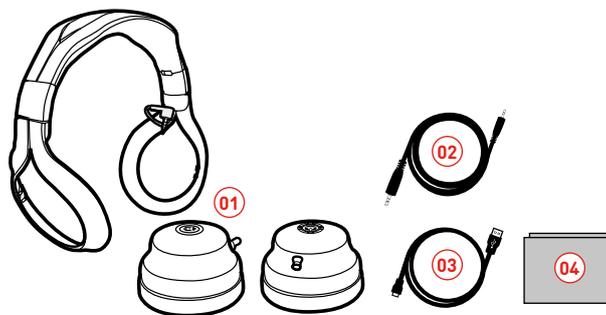


PRODUCT FEATURES

- 01] Volume Up
- 02] Volume Down
- 03] Mute Button
- 04] Power Button
- 05] Multi-Function Button

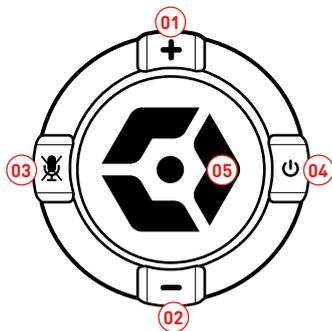

- 06] Microphone Indication LED
- 07] Retractable Boom Microphone
- 08] USB Charging Port
- 09] Audio Cable Port (Line IN)
- 10] Status LED

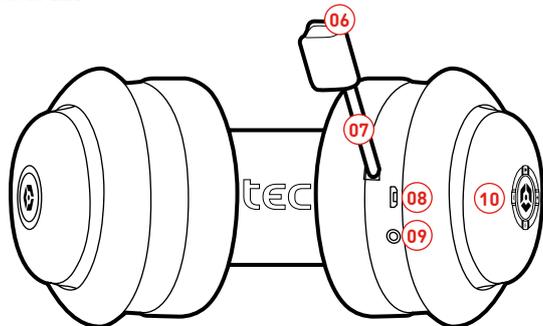

SETUP

Note: Please fully charge the battery before using for the first time. See “Charging the Headphones” section of this User Guide for details.

TURNING THE HEADPHONES ON/OFF

To turn the Headphones ON simply hold down the Power Button for 5 seconds. The status LED Indicator on the earcup will flash three times, and you will hear a “Power On” voice through the Headphones.

To turn the Headphones OFF simply hold down the Power Button for 5 seconds. The status LED Indicator on the earcup will flash six times, and you will hear a “Power Off” voice through the Headphones.

Please note: To conserve power, if the headset is not connected to a device for approximately 10 minutes, the headset will turn off automatically. To reactivate the Headphone just push the power button.

CONNECTING WITH BLUETOOTH®

- 1] Turn ON the Headphones using the Power Button and keep the button held down for 5 seconds.
- 2] The headphones will automatically pair with the previously paired BT device within 10 seconds. If no previously paired devices are found, the headset will enter pairing mode. You will hear a voice say “pairing” and the Status LED on the earcups will flash blue. The Headphones are ready to connect to the device.
- 3] Go to the Bluetooth® option in the settings of your Bluetooth Audio device or Smartphone and in the list of Devices select FL300
- 4] You will hear a voice say “connected”, the Headphones are now ready to use.

CONNECTING WITH AUDIO CABLE

To connect the Headphones to devices that do not support Bluetooth®, plug the provided 3.5MM Audio cable into the Headphone port on the left earcup and connect the other end of the cable into the audio device.

Note: This allows you to use the Headphones in places where wireless signals are restricted.

HEADPHONE FUNCTIONALITY

ADJUSTING VOLUME

Press the volume +/- key to adjust the volume. One short press will adjust one level. [A tone will sound when the volume reaches it's maximum or minimum level.](#)

PLAY/PAUSE MUSIC

Press Multi-function Button one time to Play or Pause music.

PREVIOUS/NEXT SONG

When playing music you can press "Volume Up" button for 2 seconds to play next song and press "Volume Down" button for 2 seconds to play the previous song.

MUTE FUNCTION

To mute the Headphones push the Mute Button, to unmute simply push the Button again. When the Microphone is muted the Microphone Indication LED will turn red.

VOICE CALL FUNCTIONS

When connected to a Bluetooth® Enabled Smartphone the FL300 can function as a hands-free headset. The operation of these features is detailed below.

RECEIVING A PHONE CALL

If you are listening to music when there is incoming Phone call or you are making a Phone call, the Headphones will automatically switch the connection from the music player to the Phone. The Music will be paused temporarily. After you end the call, the music resumes.

To answer a call, push the Multi-function Button quickly.
To end the call push the Multi-function Button quickly again.

Note: When you press Multi-function Button to answer or end a call, please just press one time.

MAKING A PHONE CALL

- 1) Use the Phone's keypad to dial the phone number.
- 2) Press Phones "SEND" or "OK" key. The Phone begins the call and automatically transfers the call from the Phone to the FL300.


MICROPHONE MUTE

In a call mode, press the Mute button on the FL300 Headphones, you can switch to open and close mute function. When in mute mode, the LED on the boom Microphone will illuminate RED.

USING THE PORTABLE SPEAKERS

To use the External Speaker function, please follow this procedure:

- 1) Disconnect the fixed audio cable from the headband and both of the earcups.
- 2) Remove the earcups from the headband by carefully pulling them away from the Headband housing.
- 3) When the earcups are disconnected from the headband, use the provided 3.5mm audio cable to connect the left and right earcup speakers together through the fixed audio cable ports on the top of the earcups.
- 4) To enable the External Speaker Mode, hold the multi-function button for 2 Seconds. To change back to headphones mode hold the multi-function button for 2 Seconds.

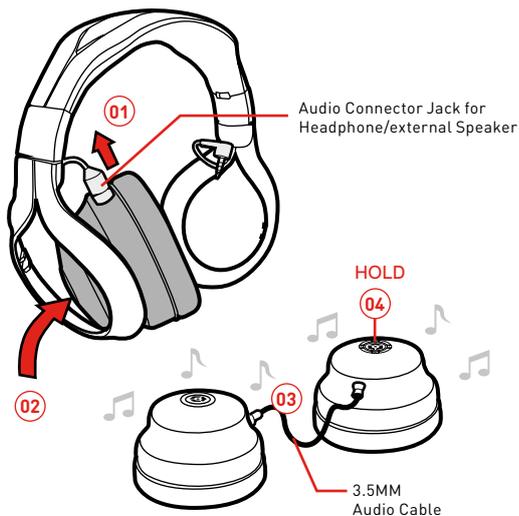

CHARGING THE HEADPHONES

- 1) To charge the Headphones, use the supplied USB cable and insert into any powered USB Port. Normal charging process takes 2-3 hours.
- 2) The red LED on the left Earcup will turn on when charging and will turn off when charging is complete.
- 3) Make sure the battery has been fully charged and fully released at the first three times of use to ensure the battery the best performance. After charging is complete, please remove the cable from the Headphones and the USB Cable from the USB port.

⚠ Do not keep the Headphones connected to the USB port for a long time when charging complete as this will shorten the lifetime of the Battery.

